


Overview of the Remote Control

1. No function
2. Play (in Media Browser mode)
3. Record (in PVR DTV mode)
4. Rapid reverse
5. Skip back (optional)
6. Mono-Stereo / Dual I-II / Current language (in DTV mode)
7. Image size
8. Green / Picture / Subtitle on-off (in DTV mode)
9. Red / Sound menu / Change channel list type (in DTV mode) (*)
10. Numeric buttons
11. Teletext / Mix / PAT
12. Info / Reveal (in TXT mode)
13. Programme up (Page down in DTV mode) / Programme down (Page up in DTV mode)
14. Mute
15. FAV (*) (Favourite Selection) (in DTV mode)
16. Return / Exit (in DTV mode) / Index page (in TXT mode)
17. No function
18. No function
19. No function
20. Picture mode selection
21. Electronic programme guide (in DTV mode)
22. Sleep timer
23. Menu on-off
24. OK / Channel list (in DTV mode) / Hold (in TXT mode)
25. Volume up / down
26. Navigation buttons
27. Source selection
28. Previous Programme
29. Blue / Install menu / Favourite mode (*) (in DTV mode)
30. Yellow / Feature / Current language (in DTV mode) (*)
31. No function
32. Subtitle on-off (in DTV mode) / TXT Subtitle
33. Skip forward (optional)
34. Rapid advance (in Media Browser mode)
35. Stop (in Media Browser mode)
36. Pause (in DTV mode) / Timeshift recording (in PVR DTV mode)

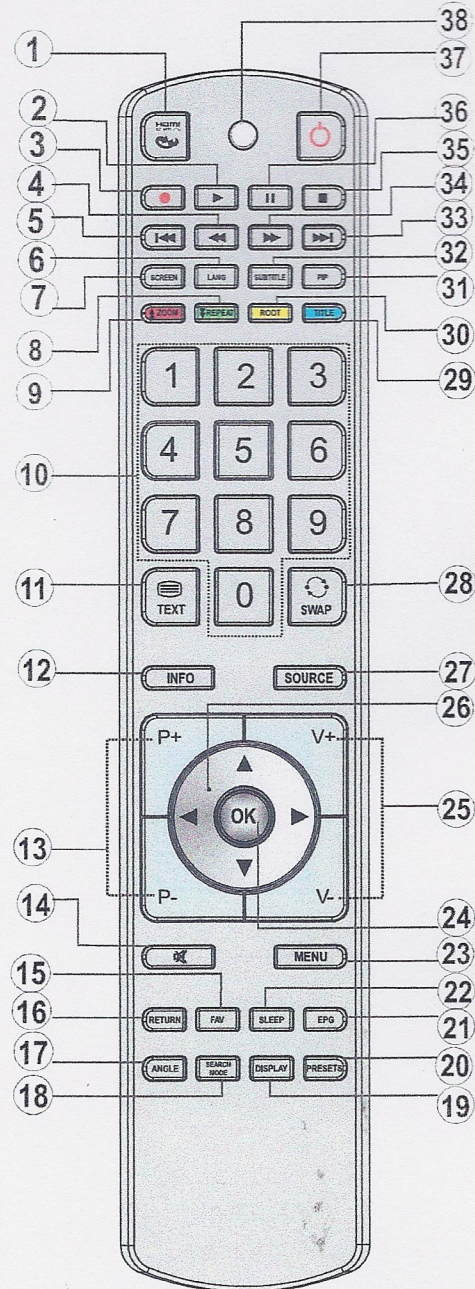

37. Standby
38. Operation Led Light

(*) Only for EU country options.